

---

# Thermo Boost Instructions

Posted by Adminww - 2008/10/11 03:26

---

Thermo Box Thermo-Boost Instructions for use.

Before use – Before using the Thermo Boost for the first time, always wash the Thermo Boost in a dishwasher or in hot water with detergent.

Use of the Thermo Boost – Place the ThermoBoost in a hot oven at up to 200 C. At 200C oven temperature, the Thermo Boost will heat up to 180 C in approximately 15 minutes. Where the Thermo Boost is placed in an unheated oven, leave the Thermo Boost in the oven until the temperature has been at 200C for at least five minutes. Heat up times need to be increased should the Thermo Boosts be piled up face to face. To use place the hot Thermo Boost in the bottom of the Thermo Box immediately before food or meals are loaded into the Thermo Box..

Cleaning – The Thermo Boost can be cleaned in the same was as any other plastic kitchen utensil, either in a dish or pot washer or in hot water with detergent or at high tempertaure in an autoclave. Thermo Boosts can also be steam cleaned or pressure washed.

Care of Thermo boxes when using Thermo Boost – Whilst the Thermo Boost can withstand high temperatures, Thermo Boost temperatures of over 150C can damage the Thermo Box. Should the Thermo Boost leave marks in the inside of a Thermo Box reduce the temperature to which it is pre heated

=====